FiberT	ch.	6 11 1			FiberTech	•	•				
the patch works!					resin based she s to all types of						
Name Exercise Contraction of the Contraction of the	R	Rapid Repair Patch				Powe	Powerful Permanent Patch				
		Stock Sode	Size		Bar Code	Package Type	e Width cm	Height cm	List Price €		
	F	RRP1	150mm x 75m	1m 5 3 9	1 1 0 0 3 0 0 0 3	15 Box	12	27	6.20		
We have		RRP2	150mm x 225	mm 5 3	9 1 0 0 3 1 0 0 0 3	2 2 Box	18	25	11.50		
	F	RRP3	300mm x 225	mm 5 3	811 9 1 0 0 3 0 0 0 3	Box	26	37	16.70		
- States	a Augusta	Rapid	Repair Patch	- 100mm	Wide Roll						
RAPHD REPAIR		Stock Code	Size		Bar Code	Package Type	Width cm	Height cm	List Price €		
1	and the second s	RRR1	1m Long	5 3	9 1 0 0 3 1 0 0 0 4	90 Box	12	12	17.90		
- North	and the second s	RRR2	2 2m Long	5 3	9 1 0 0 3 0 0 0 5	0 6 Box	12	12	27.90		
A		RRR3	3 3m Long	5 3	9 1 0 0 3 0 0 0 5	Box	12	12	37.90		
		New use	es for THE RAPID R	EPAIR PATCH	are being discovere	d daily. It is bei	ng used to	repair or	fabricate:		
in the home	on the road	in the factory	Fool Fool Fool Gates Fence	5	 Car Bodies Exhausts Tank Linings (oil, water & chemical) 	 Spray booths Model Prototyp Swimming / Papool linings 	es •H Iddling •S •D	hutes oppers pillways rip trays			

Garden Equipment

Powerful Permanent Epoxy Putty



SETS UNDER WATER MARINE APPLICATIONS Hull sections, Decking, Mouldings etc.

AUTOMOTIVE APPLICATIONS Body panels, Bumpers, and to fabricate and / or mould unavailable replacement body and trim parts and sections.

AGRICULTURAL APPLICATIONS Farm Machinery, Barns, Silos, Guttering, Dairy Equipment, Agricultural Parts, etc.

HOME & OFFICE Guttering, Water Tanks, Pipes, Wood Repair and Filler etc.

Code RRFIX

1. In order to achieve optimum adhesion, surfaces should be cleaned free of grease, dirt, paint etc. To ensure a good bond, abrade both surfaces followed by additional cleaning. 2. Twist or cut off the required amount of Putty.

3. If the material is cold, mixing it may be difficult, and warming it to room

temperature is advised. When warm

Bar Code

enough, mix and knead the putty with the

fingers for at least one minute or until it is a uniform white colour. 4. Press the putty onto the prepared surface within 5 to 10 minutes of mixing, after which time it will start to harden. If it is being used as an adhesive, apply to both surfaces and then unite by forcing them together. Support the joint as necessary. If it is being used as a filler/repair material, force the putty into the area to be filled and shape and remove any excess with a tool wetted with clean water. 5. After 20 to 30 minutes the putty will harden like metal and

Caravans

Boats

Package

Туре

Box

Width

cm

12

Height

cm

12

Hoses

start to form a tenacious bond. After 60 minutes, the material is sufficiently cured to be drilled or sawn and it will achieve full cure after 24 hours. It can also be smoothed down with the enclosed wet and dry strip and then finished as required.

List

Price €

10.50

• Ducting


... the list is endless.

Description Rapid Repair Fixol Epoxy Putty

Rapid Repair Pipe Wrap Bandage

Stock



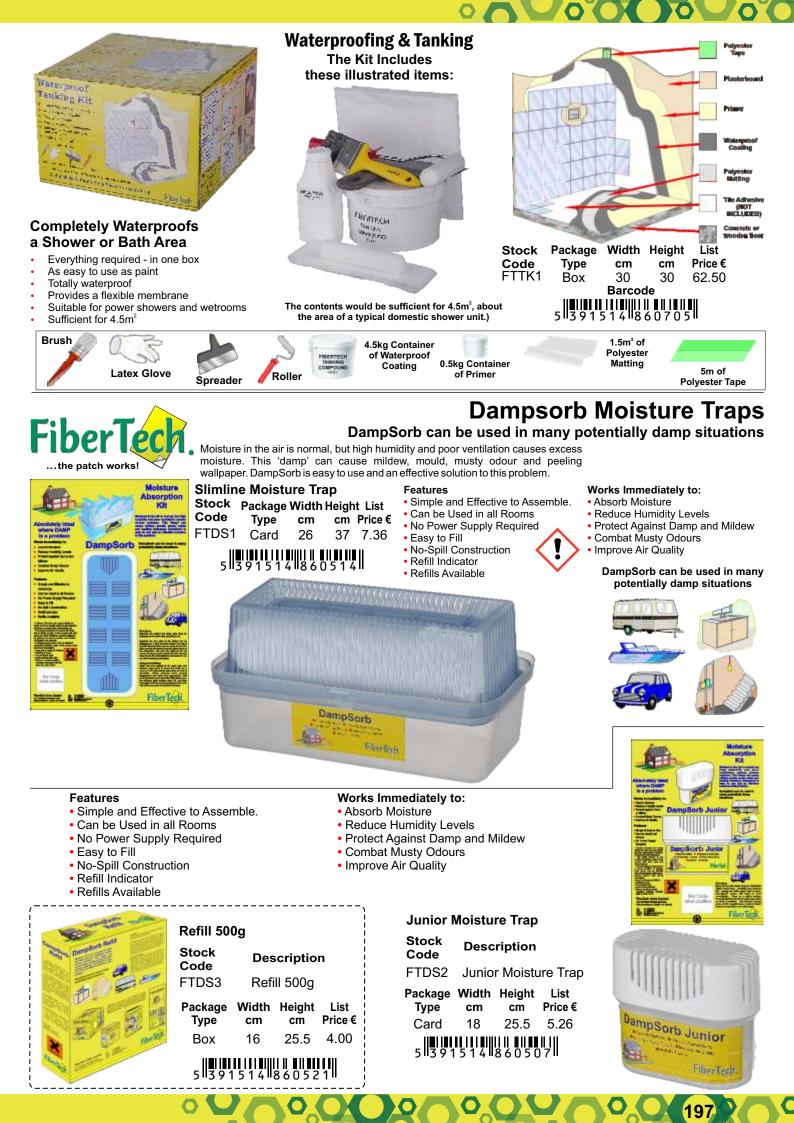

Self Advanter felt	Self Adhesive Floor Protectors - 2.5mm Thick						Floor Protection				
FiberTech.	Stock Code	Description Bar Code							List Price €		
000030	FTR1525	Pack 64,	15mm Diameter	5 391514 860) 7 3 6	Card	20	25	2.50		
200000	FTR2225	Pack 49,	22mm Diameter	5 391514 860	∎) 7 4 3	Card	20	25	2.50		
600226	FTR2625	Pack 36,	26mm Diameter	5 3 9 1 5 1 4 8 6 0	∎) 7 5 0	Card	20	25	2.50		
992669	FTR3225	Pack 25,	32mm Diameter	5 3 9 1 5 1 4 8 6 0)767∥	Card	20	25	2.50		
200000	FTR4025	Pack 16,	40mm Diameter	5 3 9 1 5 1 4 8 6 0		Card	20	25	2.50		
	FTR5525	Pack 9, 5	5mm Diameter	5 3 9 1 5 1 4 8 6 0		Card	20	25	2.50		
	FTR8325	Pack 4, 8	3mm Diameter	5 3 9 1 5 1 4 8 6 (798	Card	20	25	2.50		
Self Adhesive Floor Protectors - 5mm Thick											
82833	F	TR155	Pack 64, 15mm	5 3 9 1 5 1 4 8 6		Card	20	25	3.50		
	000	TR225	Pack 49, 22mm	5 391514 860		Card	20	25	3.50		
2000	F	TR265	Pack 36, 26mm	5 3 9 1 5 1 4 8 6 (08281	Card	20	25	3.50		
00	F	TR325	Pack 25, 32mm	5 3 9 1 5 1 4 8 6 (Card	20	25	3.50		
	F	TR405	Pack 16, 40mm	5 3 9 1 5 1 4 8 6 0		Card	20	25	3.50		
	F	TR555	Pack 9, 55mm	5 3 9 1 5 1 4 8 6 ()859I	Card	20	25	3.50		
	F	TR835	Pack 4, 83mm	5 3 9 1 5 1 4 8 6 () 8 6 6 I	Card	20	25	3.50		
Set Adhesive Fet	Self Adhes	sive Floor	Protectors - 2.5m								
FiberTech.	FTS1525	Pack 64,	15mm Square	5 1 3 9 1 5 1 4 1 8 6 () 8 7 3	Card	20	25	2.50		
THE REPORT	FTS2225	Pack 49,	22mm Square	5 3 9 1 5 1 4 8 6 0) 8 8 0	Card	20	25	2.50		
	FTS2625	Pack 36,	26mm Square	5 3 9 1 5 1 4 8 6 0) 897	Card	20	25	2.50		
	FTS3225	Pack 25,	32mm Square	5 3 9 1 5 1 4 8 6 0	903	Card	20	25	2.50		
	FTS4025	Pack 16,	40mm Square	5 3 9 1 5 1 4 8 6 0	910	Card	20	25	2.50		
Contraction of the local data	FTS5525	Pack 9, 5	55mm Square	5 3 9 1 5 1 4 8 6 0	927	Card	20	25	2.50		
	FTS8325	Pack 4, 8	3mm Square	5 3 9 1 5 1 4 8 6 0) 9 3 4	Card	20	25	2.50		
the the	s	elf Adhesi	ve Square Floor	Protectors - 5mm	Thick						
ATTA		FTS155	Pack 64, 15mm	5 3 9 1 5 1 4 8 6 (0941	Card	20	25	3.50		
PTTT	the	FTS225	Pack 49, 22mm	5 391514 860	0958	Card	20	25	3.50		
Ett		FTS265	Pack 36, 26mm	5 3 9 1 5 1 4 8 6) 9 6 5 II	Card	20	25	3.50		
L		FTS325	Pack 25, 32mm	5 3 9 1 5 1 4 8 6) 9 7 2 I	Card	20	25	3.50		
		FTS405	Pack 16, 40mm	5 3 9 1 5 1 4 8 6 0	989	Card	20	25	3.50		
	Sec. Box	FTS555	Pack 9, 55mm	5 1 3 9 1 5 1 4 8 6 (996	Card	20	25	3.50		
		FTS835	Pack 4, 83mm	5 3 9 1 5 1 4 8 6	1009	Card	20	25	3.50		
Nail In Felt Floor Protectors											
FiberTech. Fat Finur Protectors	FTRN17	Pack 10, 1	17mm 5 3 9 1 5	14 ¹ 861016	Card	12 1	5.5 1	.50	a sull		
15	FTRN20	Pack 10, 2	20mm 5 3 9 1 5	14 8 6 1 0 2 3	Card	12 1	5.5 1	.70			

0

FTRN20 Pack 10, 20mm Card 12 15.5 1.70 5||391514||861023|| 5 || 3 9 1 5 1 4 || 8 6 1 0 3 0 || FTRN22 12 15.5 1.90 Pack 10, 22mm Card 5 | **3** 9 1 5 1 4 | **8** 6 1 0 4 7 | FTRN24 Pack 10, 24mm Card 12 15.5 2.10 5||391514||861054| FTRN28 12 15.5 2.30 Pack 10, 28mm Card

0

198